




Form Mould Services cc.

Phone: (011)953-3947/59
 Fax: (011)953-4994
 Email: sales@fms-sa.co.za

P.O. Box 5533
 West Krugersdorp
 1742


24 Carter Street
 Delporton
 Krugersdorp

Socket Head Shoulder Screws Mat. 35 NC 6 ± 1100-1200 N/mm²

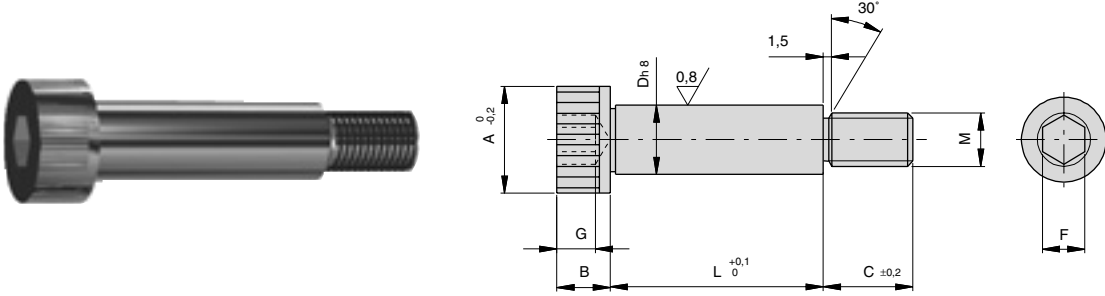

Order Code.	M	A	B	C	D	F	G	L	Order Code.	M	A	B	C	D	F	G	L
SHS M6 x 16	M6	11	5	10	8	4	3	16	SHS M10 x 20	M10	18	8	16	12	6	5	20
SHS M6 x 20								20	SHS M10 x 25								25
SHS M6 x 25								25	SHS M10 x 30								30
SHS M6 x 30								30	SHS M10 x 35								35
SHS M6 x 35								35	SHS M10 x 40								40
SHS M6 x 40								40	SHS M10 x 50								50
SHS M6 x 50								50	SHS M10 x 60								60
									SHS M10 x 70								70
SHS M8 x 16	M8	14	6	12	10	5	4	16	SHS M10 x 80								80
SHS M8 x 20								20	SHS M10 x 90								90
SHS M8 x 25								25	SHS M10 x 100								100
SHS M8 x 30								30									
SHS M8 x 35								35	SHS M12 x 30	M12	22	10	20	16	8	6	30
SHS M8 x 40								40	SHS M12 x 35								35
SHS M8 x 50								50	SHS M12 x 40								40
SHS M8 x 60								60	SHS M12 x 50								50
SHS M8 x 70								70	SHS M12 x 60								60
SHS M8 x 80								80	SHS M12 x 70								70
SHS M8 x 90								90	SHS M12 x 80								80
									SHS M12 x 90								90
									SHS M12 x 100								100

Ball Catches Mat. 1.0716 - 100°C

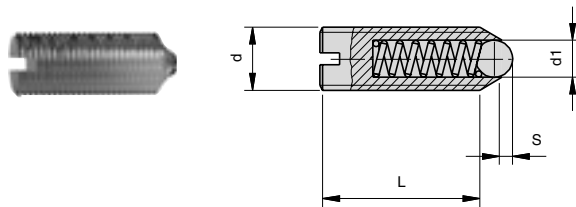

Order Code.	d	d1	S	L
BC M6 x 14	M6	3.5	1	14
BC M8 x 16	M8	5	1.5	16
BC M10 x 19	M10	6	2	19
BC M12 x 22	M12	8	2.5	22
BC M16 x 24	M16	10	3.5	24